

Control Commands



Model No. PT-LB425
 PT-LB385
 PT-LB355
 PT-LW375
 PT-LW335
 PT-LB305
 PT-TW371R
 PT-TW370
 PT-TW430
 PT-TW340

CONTROL COMMANDS

2018/12/14

CATEGORY	FUNCTION	Parameter/Name	Sub-Parameter	CONTROL	QUERY		LB425 SERIES	
				COMMANDS	COMMANDS	CALL BACK	LB425 TW371R	
BASIC OPERATION	POWER	ON		PON	QPW	001	✓	
		OFF (STANDBY)		POF		000	✓	
	VOLUME	UP		AUU				✓
		DOWN		AUD				✓
	INPUT SELECT	COMPUTER1		IIS: RG1	QIN	RG1	✓	
		COMPUTER2		IIS: RG2		RG2	✓	
		VIDEO		IIS: VID		VID	✓	
		Y/C		IIS: SVD		SVD	✓	
		COMPONENT		IIS: CP1		CP1	✓	
		HDMI1		IIS: HD1		HD1	✓	
NETWORK/USB			IIS: NWP	NWP		✓		
MEMORY VIEWER			IIS: MV1	MV1		✓		
USB DISPLAY		IIS: UD1	UD1	✓				
FREEZE (Toggle)	OFF		OFZ	QFZ	0	✓		
	ON				1	✓		
REMOTE CONTROL	MENU KEY		OMN			✓		
	ENTER KEY		OEN			✓		
	UP KEY		OCU			✓		
	DOWN KEY		OCD			✓		
	LEFT KEY		OCL			✓		
	RIGHT KEY		OCR			✓		
	AUTO SETUP	ON		OAS	QAS	0	✓	
OFF			1	✓				
AV MUTE(Toggle)	OFF		OSH	QSH	0	✓		
	ON				1	✓		
ASPECT KEY	NORMAL		VS1	QS1	1	✓		
	WIDE				2	✓		
AUDIO MUTE	OFF		AMT: 0	QMT	0	✓		
	ON		AMT: 1		1	✓		
DISPLAY OPTION	CLOSED CAPTION SETTING	OFF		OCC: 0	QCC	0	✓	
		CC1		OCC: 1		1	✓	
		CC2		OCC: 2		2	✓	
		CC3		OCC: 3		3	✓	
		CC4		OCC: 4		4	✓	
PROJECTOR SETUP	SERIAL NUMBER	SW0101234			QSN	SW0101234	✓	
	PROJECTOR RUNTIME	99999H			QVX: RTMI 0	RTMI 0=+99999	✓	
	LAMP RUNTIME	9999H			QSL	9999	✓	
	LAMP(LIGHT) CONTROL STATUS	LAMP OFF			QSS	0	✓	
		In turning ON				1	✓	
		LAMP ON				2	✓	
TEMPERATURE (INTAKE)	LAMP Cooling				3	✓		
	0030/0080			QTM: 0	0030/0080	✓		

Note: The commands or parameters with "*" shows available commands or parameters for the projector which has been activated by the Upgrade Kit.