


Operating Instructions

Interactive Pen Commercial Use


Model No. **ET-PEN100**

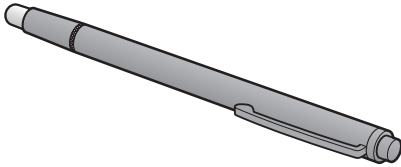

Thank you for purchasing this Panasonic product.

- Before using this product, please read this instructions and "LightPenII: Operation Manual" completely, and save this manual for future use.

Names



How to use the pen

While pressing the tip against a hard screen, the tip of the pen and the LED for the internal infrared ray will both light. This is sensed by the infrared ray sensor on the front of the projector, and the location of the tip of the pen is detected.


- 1) Press the power button to turn the power on.
- 2) Place the tip of the pen anywhere on the screen.
- 3) By pressing the tip against a hard screen, you can drag. In pen mode, you can draw lines.

Before using the pen

Install batteries.

Installing and Removing Batteries

1. Rotate as shown in the figure.
2. Install 2 AAA/R03 or AAA/LR03 type batteries.

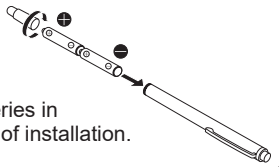

* Remove the batteries in the reverse order of installation.

Attention

Since there is a touch sensor inside the tip of the pen, pushing or bending the tip will consume battery power. In order to prevent unnecessary battery consumption when not in use, press the power button to turn the power off. (Press the tip of the pen to confirm that the LED does not light.)

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis.

Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Panasonic Corporation

Web Site : <https://panasonic.net/cns/projector/>

© Panasonic Corporation 2012

EEE Yönetmeliğine Uygundur.

EEE Complies with Directive of Turkey.


ENGLISH

Printed in Taiwan
1LG6P1P1022-- (IJDV)
TQZJ711-1

取扱説明書


インタラクティブペン 業務用

品番 ET-PEN100

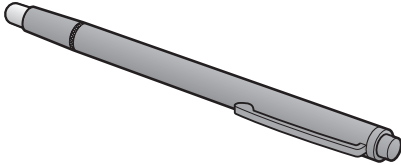

このたびは、パナソニック製品をお買い上げいただき、まことにありがとうございます。
この「取扱説明書」および「LightPenII: 操作説明書」をよくお読みのうえ、正しい操作を行ってください。
そのあと大切に保管してください。

各部の名称

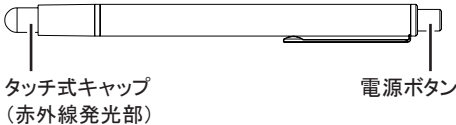

タッチ式キャップ
(赤外線発光部)


電源ボタン

ご使用前に

電池が必要です。

電池を入れる、取り出す

1. 図のようにペンの頭部を回して開ける。
2. 単四形乾電池 (2 個) を図の向きに入れる。

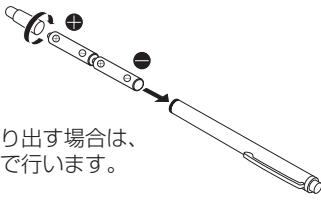

- 電池を取り出す場合は、逆の手順で行います。

使用方法

先端を硬いスクリーンに押し付けている間、ペンのタッチ式キャップ内部の赤外線の LED が点灯します。これをプロジェクターの前面にある赤外線センサーが感知し、ペンの先端の位置を検出します。

- 1) 電源ボタンを押して、電源をオンします。
- 2) ペンの先端をスクリーン上の任意の場所に置きます。
- 3) 先端を硬いスクリーンに押し付けることでドラッグできます。ペンモードの時に、線を引くことができます。

お願い

ペンの先端内部にはタッチセンサーが付いていますので、先端が押されたり傾けられたりすると電池を消耗します。無駄に電池を消耗させないため、使わない時は、電源ボタンを押して、電源をオフの状態(ペンの先端を押し付けて内部の LED が点灯しないことを確認)にして保管してください。

ヨーロッパ連合以外の国の廃棄処分に関する情報



これらのシンボルマークは EU 域内でのみ有効です。

製品を廃棄する場合には、最寄りの市町村窓口、または販売店で正しい廃棄方法をお問い合わせください。

パナソニック株式会社 コネクティッドソリューションズ社

〒571-8503 大阪府門真市松葉町2番15号 電話 ☎ 0120-872-601

© Panasonic Corporation 2012

JAPANESE

SS0212-0
TQZJ711-1